



EUM 530



Line	Item No.	Description
1	663 548 200	Cowling-orange
5	661 300 049	Bearing Shell
6	661 300 820	Tension Spring
7	661 300 844	Link Bar
8	661 300 101	Bearing Plate
9	663 510 468	Screw
10	663 546 128	Axle Front
11	661 300 831	Spacer Sleeve
12	661 300 028	Wheel Front
13	663 701 083	Washer
14	663 546 137	Wheel Cover
15	663 701 124	Space Nut
16	661 300 821	Cover Plate
17	663 525 779	Screw
18	663 700 390	Woodruff Key
19	663 512 463	Blade Hub
20	663 548 144	Spacer Washer
21	663 531 487	Blade
22	663 316 913	Washer
23	663 700 202	Washer
24	663 700 139	Washer
25	663 329 907	Screw
39	663 529 550	Screw
44	663 527 695	Gear Box
45	663 548 256	Return Spring
46	663 548 170	V Belt
50	663 531 821	Cable
52	663 531 850	Engine Brake Cable
55	661 300 029	Wheel
56	663 524 725	Grass Deflector
57	661 301 721	Spring left
58	661 301 720	Spring right
59	661 300 853	Bearing Shell
60	663 700 489	Retainer Ring
61	663 526 745	Pinion comp left
62	661 300 005	Pinion
63	663 348 875	Slide Sleeve
64	663 526 746	Pinion comp right
65	661 300 011	Thrust Washer
66	663 510 923	Ball Bearing
67	663 546 130	Axle Rear
70	663 700 122	Self Lock Nut
71	661 300 095	Return Spring
72	661 300 048	Lever
73	661 300 848	Spacer Sleeve
74	663 703 565	Screw
75	663 543 554	Screw
76	661 300 623	Axle Clamp
77	663 548 202	Chute/Axle Tunnel
85	663 548 257	Drive Clutch Bowden Cable
86	663 512 721	Pivot Unit right
87	663 512 722	Pivot Unit left
88	663 512 576	Break Release Bracket Left
89	663 512 723	Plate
91	663 543 556	Screw
92	663 548 210	Clutch Release
93	663 548 208	Break Release
96	663 703 697	Scrwe
97	663 703 005	Washer
98	663 500 073	Secure Nut
99	663 375 953	Screw
100	663 702 849	Self Lock Nut
101	663 703 703	Screw
102	663 531 818	Handle

EUM 530



Line	Item No.	Description
103	661 300 806	Adjusting Lock
104	663 544 675	Wing Nut
105	661 300 904	Compression Spring
106	661 300 805	Holder
108	661 300 838	Transfer Rod
109	661 300 020	Hight Adjust Release
110	661 300 019	Hand Grip
111	661 300 017	Aperture Blind
113	663 703 704	Screw
115	661 013 101	Grass Collecting Bag
116	661 301 092	Frame
117	663 701 322	Screw
129	663 548 229	Bearing Bush
131	663 702 387	Washer
132	663 700 303	Screw
133	663 525 433	Plate
137	663 548 217	Starter Rope
138	663 373 264	Screw
139	663 505 322	Cable Retainer
140	663 531 819	Gear Change Lever
143	663 300 161	Disk
144	663 700 656	Washer